



METAL TRIM OPTIONS (OPTIONAL)

Metal trim can be added as per design preference and for aesthetic appeal.



A T-Shape Trim





B L-Shape Trim

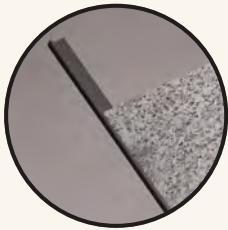

C Outside Corner Trim

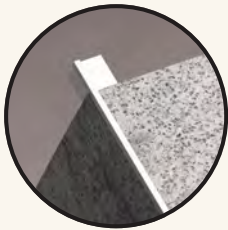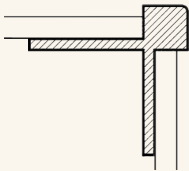

D Inside Corner Trim

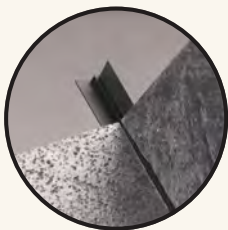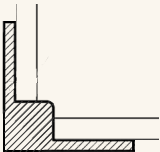

ADHESIVES FOR STONOVIA STONE

	Drywall	Painted Surfaces	MDF	Doors & Cabinetry	Concrete & Backer board	Ceramic	Wood	Metal	Fiberglass
Interior	+ □ ○ □ △	+ ○ □ □ △	+ □ □ △	+ □ □ △	+ ○ □ □ △	○ □ □ △	+ □ □ △	+ □ □ △	□ □ △
Exterior	N/A	□ □ △	N/A	□ □ △	□ □ △	□ □ △	□ □ △	△	△
Wet Areas	N/A	N/A	N/A	N/A	□ □ △	□ □ △	N/A	△	△

+ : Construction Adhesive: Boss 635 Contact Adhesive (Spray) or Boss 165 Multi-Seal *(Cartridge)*(One Surface Must be Porous)
○ : K100 Hyperflex Litokol
□ : X90 Epoxy Litokol
△ : Litoelastic Epoxy / Polyurethane Litokol
N/A : Not Applicable or Not Recommended

SEALERS FOR STONOVIA STONE VENEER

- Tile Doctor Natural Sealer. Solvent Based Sealer for Large Projects
- Tile Doctor Advanced Hydro Protect, Premium Water Based Sealer
- Tile Doctor Advanced Hybrid Sealer, Penetrating Sealer No-Gloss
- Tile Doctor Advanced Green Enhance and Protect, Semi-Gloss Enhancer

CLEANERS

Tile Doctor Advanced Tile and Stone Cleaner, PH Neutral Cleaner Concentrate

SIZES AVAILABLE


Gallon
Pint/Quart/Gallon
Pint/Quart/Gallon
Pint/Quart/Gallon

STONOVIA

Slate/Marble/Sandstone/Rustic

Installation Guide

- Preconditions
- Tools needed
- Installation steps
- Metal profile options

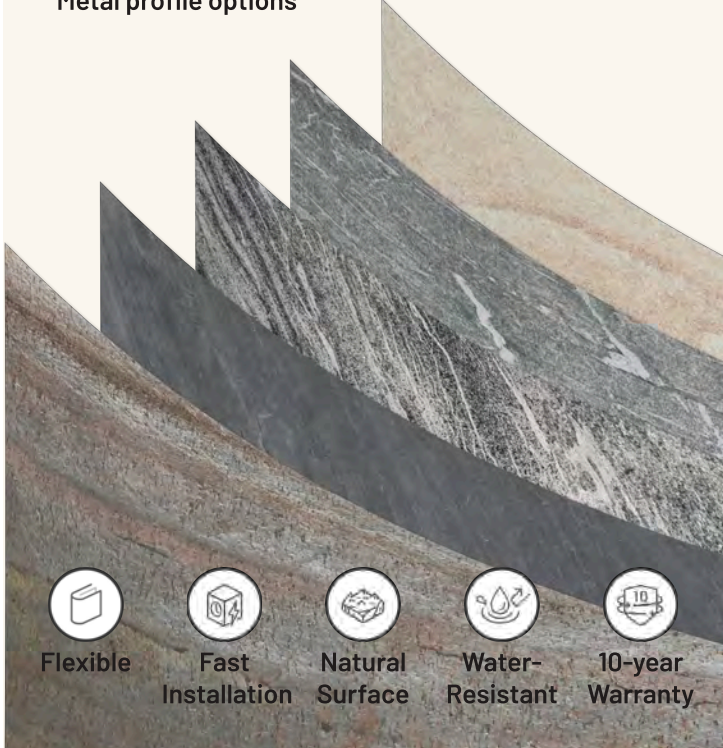

- Flexible
- Fast Installation
- Natural Surface
- Water-Resistant
- 10-year Warranty

INSTALLATION REQUIREMENTS



Flatness

Ensure the substrate surface is flat and free of significant irregularities.

Temperature

For optimal installation, ensure the ambient temperature is above 50°F (10°C).

A heat gun is recommended to help expedite the flattening of the product when it is rolled up, especially in low temperatures.

Stonovia stone veneers are heat-resistant up to 400°F (205°C).

Saw We recommend using a circular saw or track saw for cutting.

Blade Choice:

Tile Diamond Blade – Thin Kerf, Continuous Rim

Cutting Method:

Wet Cut recommended for best results (Dry Cut still works).

Adhesive Use qualified adhesive for the non-translucent collection and waterproof adhesive for wet or outdoor applications.

Additional Tools Measure tool, Pen/pencil, Pressure roller, Masking tape, and metal profiles if needed.



Saw



Adhesive



Measure



Pencil



Roller



Masking tape

INSTALLATION STEPS

1 Unboxing Preparation

Remove the products from the box. If they are rolled up, lay them flat on a clean, level surface.

This process may take up to 48 hours, typically taking longer in lower temperatures.

It's normal for the stone surface to exhibit slight flaking during unboxing and installation.

*A heat gun is recommended to help expedite the flattening process.

2 Measurement and Marking

Measure the desired size on the veneers and mark where you need to make cuts.

3 Cutting with Precision

Use a circular saw or track saw to cut the sheets to your desired dimensions.

4 Surface Preparation

Ensure the substrate where you intend to apply Stonovia stone veneers is clean. Remove dust and ensure there are no significant bumps on the surface.

5 Masking before Adhesive Application

Cover all the edges of the veneers with masking tape to prevent the adhesive from staining the stone surface during application.

6 Adhesive Application

Apply qualified adhesive to the entire back of the product or the substrate surface.

(For wet or exterior wall applications, use a water-proof adhesive system suitable for the project conditions.)

7 Enhancing Adhesion

Use a pressure roller to enhance the adhesion of the products to the wall or other substrates.

8 Grout Application Guide

If you choose to use grout over metal trims between the veneers, make sure to use masking tape again to cover the edge of the veneers and leave the desired gap (1/16" to 1/8" recommended) for clean grout. Then use a grout gun with grout of your preferred color. A flexible silicone-based grout is recommended.

9 Drying Period

Allow it to dry for up to 24-48 hours (depending on the adhesive used and temperature).

10 Completion

Installation is now complete and ready for final inspection.



Installation Video